


Vivo Media+ & Vivo Media +5 User Guide



M1-M5	Radio	Mute
UP	Down	Flash
Speaker	Redial	Vol-/Vol+
Hold	SET	Play
SOS	Snooze	Bluetooth

FUNCTION KEY DIAGRAM

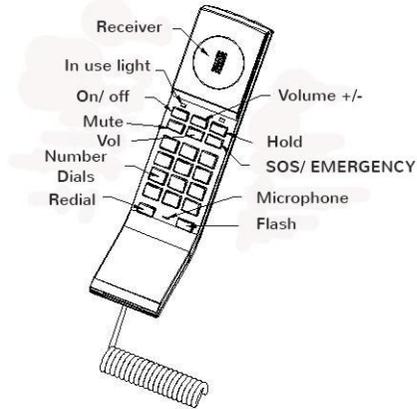

2. Installation before Use

Put the package handset into the stand cradle; connect the cord line, handset line and the power adapter

FUNCTION INSTRUCTIONS

1、 Place a call / Answer a Call

2、 Pick up the handset and press the ON/OFF button to turn it on. When the phone is on, a light will come on to show you that the phone is connected and you can make a call. To end the call, press the ON/OFF button. When the phone is in use and a new call is coming through, you will hear the ringtone and the indicator will flash. When this happens, press the ON/OFF button on the handle to answer the call. At this time, the any music playing on your iphone is paused, and will resume playing automatically once you have ended the call.

2、 Volume

Press the volume adjustment button VOL+ or VOL- to increase or lower sound , there are 4 options for volume control," 1- 4" when you pick up the handset.

3、 Hold

When you are taking a call, press the HOLD key, the LED light will slowly blink red, indicating the call is on hold.

Press the HOLD key again to resume the call. The LED will remain lit and stop blinking to let you know that the phone is in use.

4、 Flash

The flash time can be selected from 100~1000MS. Please refer to the passwords INSTRUCTIONS and adjust accordingly. The default time is 600MS. Pick up the handset and press Flash key help you transfer or quickly disconnect a call. **P0 is 100ms; **P1 is 300ms; **P2 is 600ms; **P3 is 1000ms. Press and hold the last digit for 3 seconds.

PASSWORDS INSTRUCTIONS

Description	Password	Remark
Set FLASH time: 100ms	**P0	Note: all the passwords setting should at OFF-HOOK mode and you have to holding the last digit of password at least 3 seconds, "P" is setting on the "REDIAL" key.
300ms	**P1	
600ms	**P2	
1000ms	**P3	

5 Redial

Press the REIDAL key to dial the last number out from handset.

6 Memory Key Settings: Mn=M1-M10.

Memory key Settings: In the on-hook mode, press " phone' number + hold Mn for 3 seconds until the indicator light is blinks, which shows that the corresponding number has been saved successfully. Mn=M1~M10

7 Use SOS key

In the on-hook mode, enter the number and holding SOS key for about 3 seconds until the in use light is blinks.

Pick up the handset and press SOS key to connect with emergency services.

8 Mute

To mute a call by pressing MUTE button only, a blinking light will remind you into mute .During this time the other cannot hear you. Press mute key again to restore the conversation. When the mute button is pressed during a call, the indicator light flashes to remind you that you are in mute mode, you will be able to hear the caller but they will not be able to hear. When you press this button again, the indicator light is on and the light is restored. To normal call status.

9 Time setting

In the standby state (no play or pause playback), press and hold the SETTINGS button to enter the time setting. The hour number is flashing, press the +, - buttons to adjust, press the SETTINGS button to confirm and then flash, press the +/- button to adjust the minute. Press the SETTINGS button again to confirm.

10 Alarm setting

In the standby state (no play or pause playback), press the setting button, the alarm icon on the display lights up, the time setting mode is the same as above; when the alarm is reached, press the snooze button to enter the snooze state (9 minutes later) The alarm is activated. When the other buttons are pressed, the alarm will stop and the alarm icon will go out.

11 Music playing

Before use

First connect the multimedia phone to the telephone line and plug in the DC5V/1.5A power adapter, and confirm that the clock screen is displayed before it can be used normally.

Clock operation

a) Clock setting

In the standby state, press and hold the "Settings" button for 3 seconds, when the hours are flashing, press "UP" or "DOWN" to adjust the hour, press "Setting" again, the minute number is flashing, press "UP" " or "DOWN button" to adjust the points, and then press the "Settings" button to confirm.

b) Alarm setting

In the standby mode, press the "Settings" button, the alarm icon appears in the upper right corner of the clock, and the hour number is flashing. The adjustment method is the same as the clock setting.

c Alarm clock cancellation

When the alarm is set, and you want to cancel the alarm before use. Press the "Settings" button to cancel. When you are ringing, press any function button to cancel. After canceling the alarm, the icon of the clock in the upper right corner will go out.

d) alarm clock snooze function

When the alarm is ringing, press the “ZNOOZE button” (snake button) to stop the alarm, the icon in the upper right corner of the clock is still lit, and the alarm will be activated after 10 minutes.

e) Clock brightness adjustment (power-on default is low brightness)

Press the “VOL+” and “VOL-” buttons in standby mode to adjust the display brightness.

2.3, media playback

a) FM radio

When the “Radio” button is pressed in the standby state, the radio is turned on. In the upper left corner of the display, the word “RADIO FM” is displayed. Press the “UP button” or “DOWN button” to adjust the listening radio broadcast. Press the “VOL+” and “VOL-” buttons. Adjust the volume and press the “Radio” button again to turn off the radio.

b) AUX input playback

In the standby state, use the AUX audio cable to insert the audio source into the AUX input port on the back of the media phone. The right side of the display shows “AUX”, press the “Play” button to start play, the AUX icon flashes, and then press the “Play” button to play. Pause, the AUX word on the right side of the screen goes out after the AUX line is removed

c) Bluetooth playback

When using Bluetooth for the first time, you must pair the source device with the multimedia phone to play it. The pairing has automatic and manual pairing:

A. Automatic pairing (optional according to order requirements): In the standby state, the NFC-enabled audio source device will automatically enter the pairing when it is close to the media phone panel, and the phone's Bluetooth indicator light will start to flash when the two devices are connected. , the indicator light turns on for a while, and the Bluetooth icon on the display lights up;

B. Manual pairing: In the standby state, press the “Bluetooth” button, the Bluetooth indicator flashes quickly. At this time, the Bluetooth function of the source device is turned on, the Bluetooth indicator of the successful media phone is long, and the Bluetooth icon is lit. C. Playback: When the device is successfully paired, the Bluetooth icon on the display lights up, press the “Play” button to play, the Bluetooth icon flashes (the indicator light

flashes slowly), press “UP” or “DOWN” Select to play the song and press "VOL+" And the “VOL-” button to adjust the volume.

d) Source Switching

A. When both AUX and Bluetooth are connected to the media phone, the display simultaneously displays the AUX and Bluetooth icons. In the standby or paused playback state, press the “UP” or “DOWN” button to select the switch. The selected icon is in the Flash, press the "Play" button to play;

B. Regardless of whether AUX or Bluetooth is playing, press the “Radio” button to switch to the radio state.

To switch to other playback in the radio state, you must first turn off the radio, press the "UP" button or Select the “DOWN button” (select the corresponding icon to flash), press the “Play” button to play.



Hotel Technology International Limited

1st Floor • 239 Kensington High Street

London W8 6SA, United Kingdom

Telephone: +44 (0)203 405 1200, Fax: +44(0) 203 411 6610

Email: sales@hotel-tech.com • Website www.hotel-tech.com